

USER MANUAL

# COMO

01 Tilt Limiter

02 Seat Height

03 Tilt Tension

bristol

# 01

## Tilt Limiter

Lever under right side of seat


### **To engage:**

Push lever inwards to lock the tilting mechanism

### **To release:**

Pull lever outwards to release the tilting mechanism.

***Allows you to sit in an upright position or reclined position.***

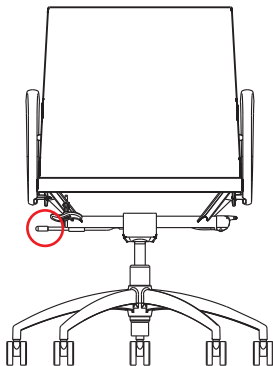

# 02

## Seat Height

Lever under left side of seat


### **To raise:**

Take your weight off the seat, lift lever up.

### **To lower:**

Remain seated, lift lever up.

***Allows you to adjust the height of the seat, for good support and blood circulation in the legs.***

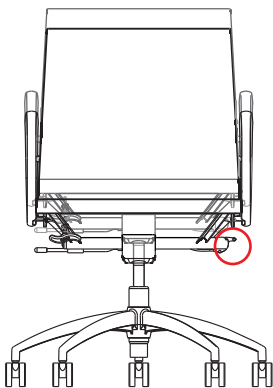

# 03

## Tilt Tension

Knob under right side of seat


### **To increase:**

Turn knob clockwise.

### **To decrease:**

Turn knob counterclockwise.

***Set the resistance when leaning back to support and balance your weight in any position.***

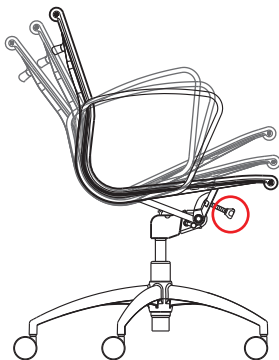

# Contact

## Malaysia

Tel No: +603 8962 3233

Email: [export@bristol.com.my](mailto:export@bristol.com.my) (International only)  
[sales@bristol.com.my](mailto:sales@bristol.com.my) (Malaysia only)

## Singapore

Tel No: +65 6438 2178

Email: [sales@bristol.com.sg](mailto:sales@bristol.com.sg)

## India

Tel No: +91 96 8619 1391

Email: [sales@bristolindia.com](mailto:sales@bristolindia.com)

## Thailand

Tel No: +662 689 6380

Email: [sales@bristol.co.th](mailto:sales@bristol.co.th)

## Indonesia

Tel No: +62 21 2952 4141

Email: [indonesia@bristol.com.my](mailto:indonesia@bristol.com.my)

## Vietnam

Tel No: +84 79 641 9876

Email: [vietnam@bristol.com.my](mailto:vietnam@bristol.com.my)



Rgn No : Q112788C

Rgn No : E112788